



Actuator Bar			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	032-6033-00	Bronze Bushing
2	1	024-6034-00	Grease Fitting
3	1	018-5049-00	1/2" x 2" Bolt
4	1	025-7036-00	1/2" Spacer
5	1	018-2004-00	Spring Tensioner
6	6	013-7018-00	1/2" Hex Nut
7	1	034-5039-00	Pump Idler Spring
8	1	033-6001-00	4 3/4" Idler Pulley
9	5	019-5007-00	1/2" Lock Washer
10	1	039-5944-00	Pump Idler Bracket
11	2	019-6017-00	5/8" Nylon Washer
12	1	013-7021-00	5/8" Nylock Nut
13	1	028-2502-00	Height Indicator Bar
14	1	031-7000-00	Height Indicator Lever
15	1	028-4020-00	Actuator Bar - Transaxle
16	4	013-5041-00	3/8" Nylock Nut
17	2	017-7008-00	Pillow Block Bearing
18	4	018-5006-00	1/2" x 1 1/2" Hex Bolt
19	2	047-6047-00	Deck Chain
20	4	018-6012-00	3/8" x 1 1/2" Bolt
21	1	018-5311-00	5/8" x 4" Hex Bolt
22	2	031-0052-00	Transaxle Neutral Lever